


NOTE:  
ALL OPENING IN SHEAR WALLS ARE TO BE COORDINATED  
WITH ARCHITECT AND SEOR PRIOR TO CONSTRUCTION.

## OPENINGS IN SURE-BOARD SHEAR WALL DETAILS


[illegible]

NOTES:


### SHEAR WALL SCHEDULE

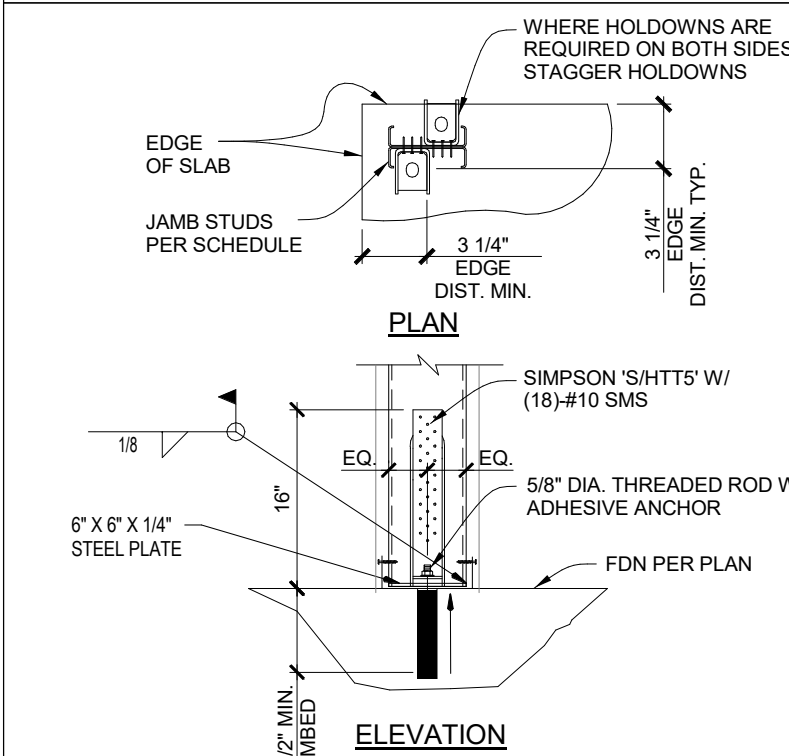

TYP. HOLDOWN DETAIL

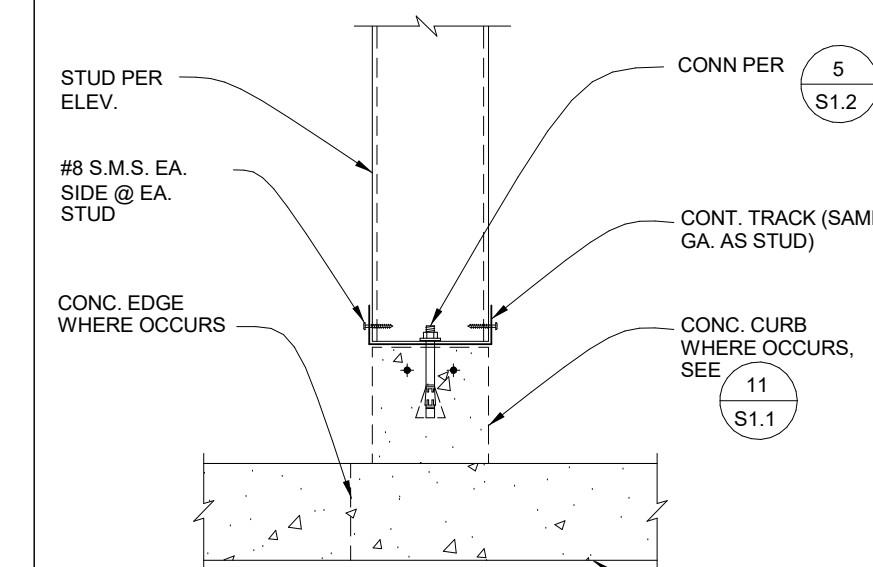


TYP. BASE OF WALL

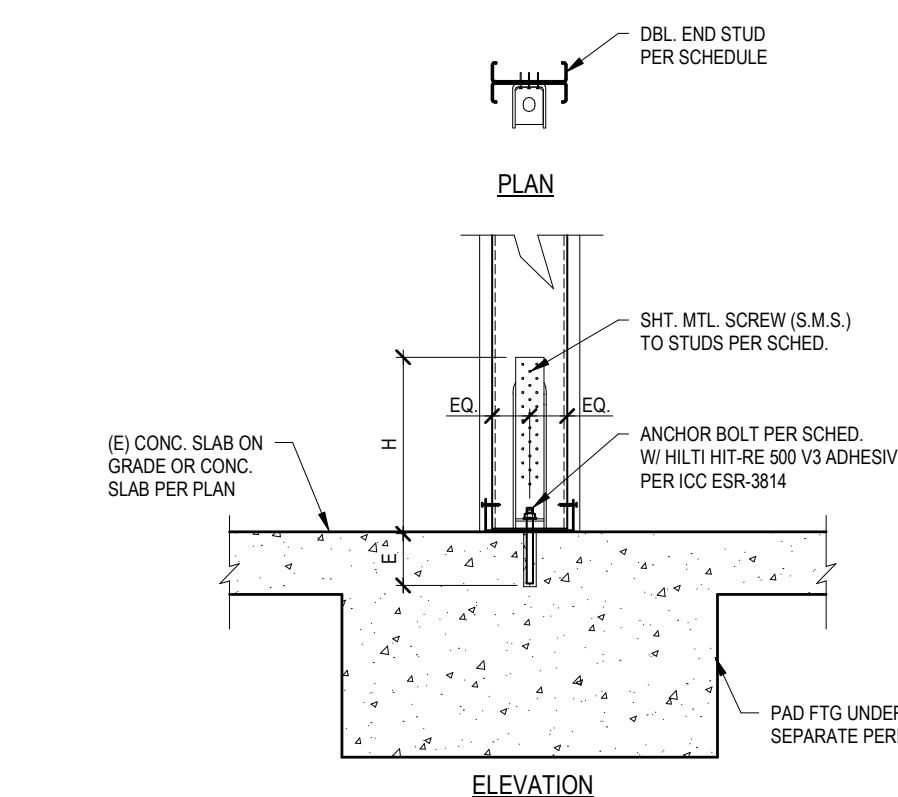


HOLDOWN TYPE	HEIGHT 'H'	CONNECTION TO STUDS	ANCHOR DIAMETER	EMBED 'E'
S/LTT20	20"	(8)-#10 S.M.S.	1/2"	4"
S/HTT14	15"	(18)-#10 S.M.S.	5/8"	6"

NOTES:  
1. HOLDOWNS SHALL BE BY HILTI (ICC ESR-3814)


HOLDOWN SCHEDULE

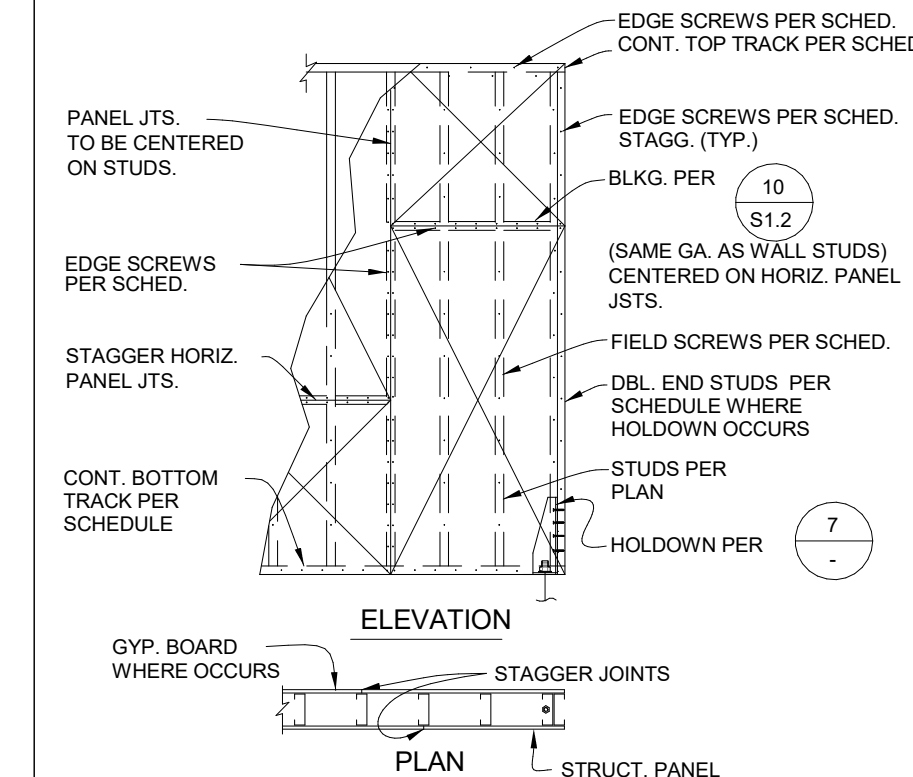

TYP. SHEAR WALL PANEL

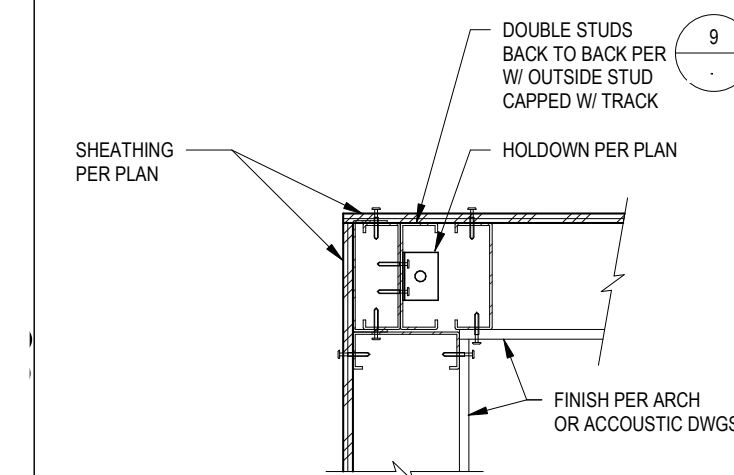

TYP. TRACK SPLICE ELEVATION

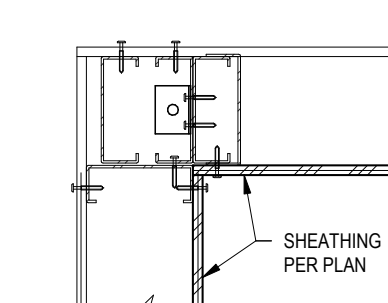

### 1) TYPICAL CORNER STUD HOLDOWN